

## Touch Screen

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display, etc. For details, refer to the "Owner's Manual".



1 "CLIMATE": Air conditioning operation screen

2 "AUDIO": Audio control screen\*

3 "SETUP": Setup screen\*

4 "DISP": Adjust picture quality\*

5 "MAP/VOICE": Vehicle's current position\*

6 "DEST": Destination screen\*


7 "INFO/PHONE": Information screen\*

\*: See "Navigation System Owner's Manual".

## n Set up screen

---

Press "SETUP" to display the "Setup" screen.

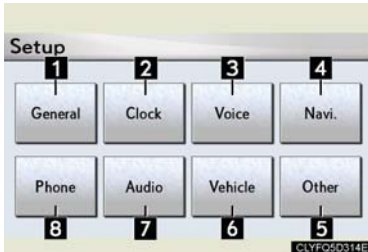


- 1 "General": General settings screen
- 2 "Clock": Clock settings screen
- 3 "Voice": Voice settings screen
- 4 "Navi.": Navigation settings screen
- 5 "Other": Other settings screen
- 6 "Vehicle": Vehicle settings screen
- 7 "Audio": Audio settings screen
- 8 "Phone": Phone settings screen

## n Information screen

---


Press "INFO/PHONE" to display the "Information" screen.

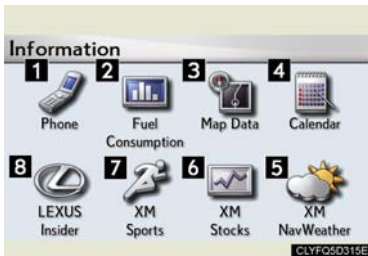


- 1 "Phone": Phone screen
- 2 "Fuel Consumption": Fuel consumption screen
- 3 "Map Data": HDD data screen
- 4 "Calendar": Calendar screen
- 5 "XM NavWeather": XM NavWeather™ screen
- 6 "XM Stocks": XM Stocks screen
- 7 "XM Sports": XM Sports screen
- 8 "LEXUS Insider": LEXUS Insider screen

## Front Air Conditioning System

### ► Without rear air conditioning system

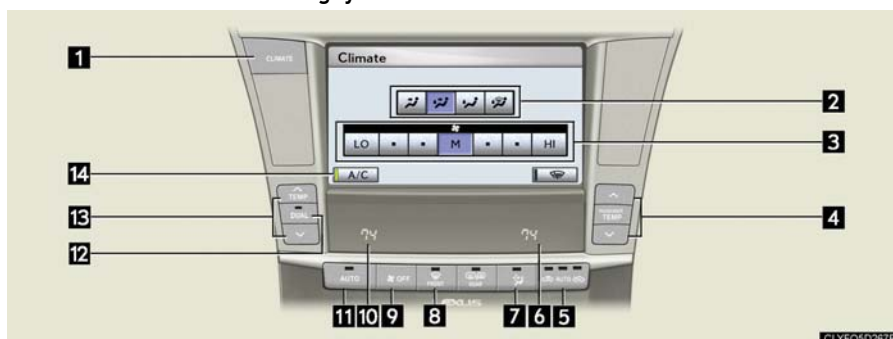

### ► With rear air conditioning system

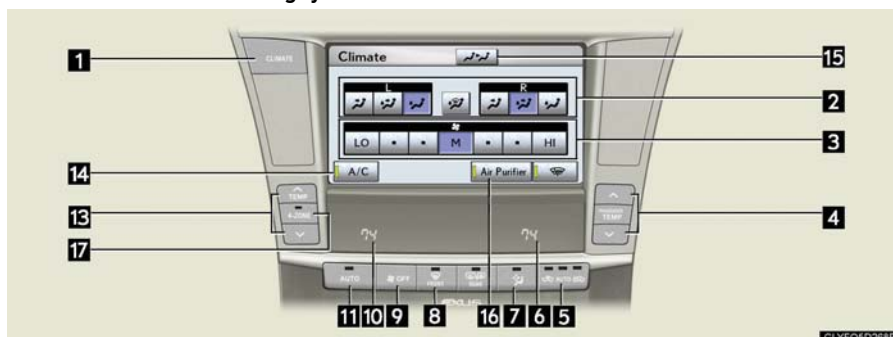

- |  |  |
|--|--|
| 1 "CLIMATE" (air conditioning operation screen display button) | 10 Driver side temperature display                         |
| 2 Air flow display   | 11 Automatic mode button                                   |
| 3 Fan speed display  | 12 Dual mode button  |
| 4 Passenger side temperature control                           | 13 Driver side temperature control                         |
| 5 Outside air/recirculated air mode button                     | 14 "A/C" button  |
| 6 Passenger side temperature display                           | 15 Rear air conditioning operation screen display switch   |
| 7 Micro dust and pollen filter button                          | 16 Air purifier and rear air conditioning operation switch |
| 8 Windshield defog/defrost                                     | 17 Individual mode button                                  |
| 9 "OFF" button   |  |

## **n Using the automatic mode**

---

- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

## **n Adjusting the temperature in dual mode (without rear air conditioning system)**

---

In dual mode, driver and passenger side temperature settings can be adjusted separately.

Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.  
To cancel the dual mode, press the "DUAL" button.

## **n Adjusting the temperature in individual mode (with rear air conditioning system)**

---

In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.


Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.  
To adjust the temperature for the rear seats, see P.48.  
To cancel the individual mode, press the "4-ZONE" button.

## Rear Air Conditioning System (If Equipped)

### ► 5-seat models




### ► 4-seat models

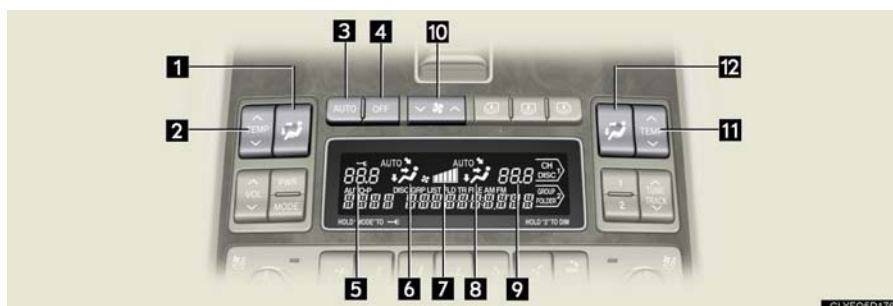

- |   |   |
|---|---|
| 1 Changes the left side air outlet used | 7 Air volume display                      |
| 2 Left side temperature control         | 8 Right side air flow display             |
| 3 Automatic mode button                 | 9 Right side temperature display          |
| 4 "OFF" button                          | 10 Air volume controls                    |
| 5 Left side temperature display         | 11 Right side temperature control         |
| 6 Left side air flow display            | 12 Changes the right side air outlet used |


### n Front controller (touch screen)

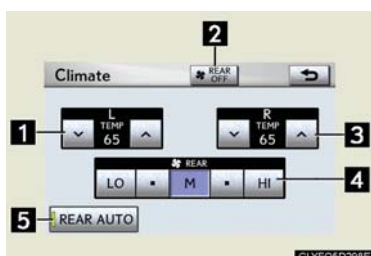

- |   |
|---|
| 1 Left side temperature control switch and display  |
| 2 Off   |
| 3 Right side temperature control switch and display |
| 4 Fan speed display                                 |
| 5 Automatic mode button                             |

## Climate Control Seats/Seat Heaters

### n Front climate control seats

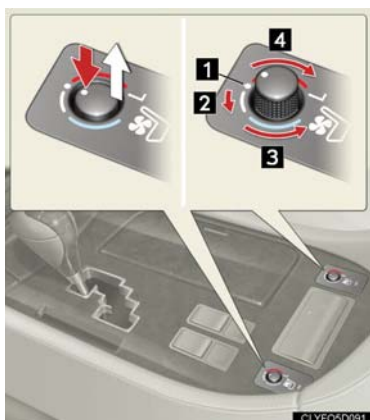


Press the knob to pop out, and turn the knob to adjust the seat temperature.

- 1 Off
- 2 Ventilation
- 3 Cool air
- 4 Warm air

### n Rear climate control seats (if equipped)


#### ► 5-seat models

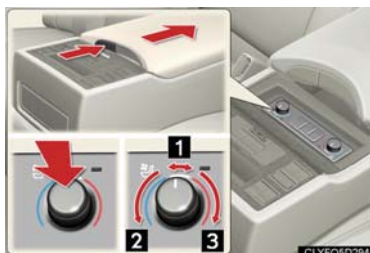

Slide the armrest lid. Press the knob to turn the system on and then turn it to adjust the temperature.

- 1 Ventilation
- 2 Cool air
- 3 Warm air

#### ► 4-seat models

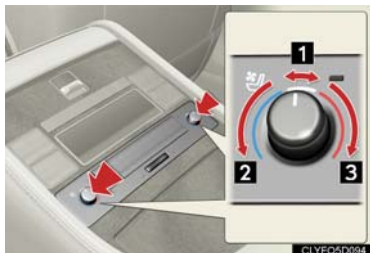


Press the knob to turn the system on and then turn it to adjust the temperature.

- 1 Ventilation
- 2 Cool air
- 3 Warm air

The rear climate control seats can also be turned on and off from the front seat by pressing the button.



## n Rear seat heaters (if equipped)

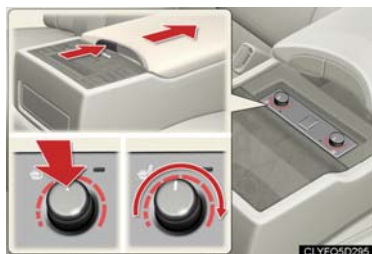

Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

The rear seat heaters can also be turned on and off from the front seat by pressing the button.



## Console Box



### ► Without rear console display

To open, slide and lift the armrest with the button pushed in.




### ► With rear console display

To open, press the button and lift the armrest.

There is a power outlet located in the front console box.



## Glove Box

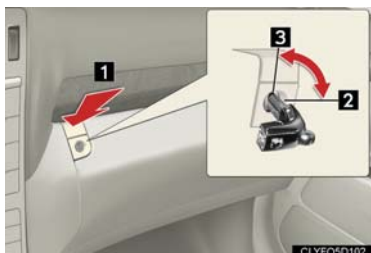

1 Opens: press the button.

2 Locks

3 Unlocks

The glove box can be locked and unlocked using the mechanical key.

## Auxiliary Boxes



### ► Overhead

To open, press in the button.



### ► Rear console (with rear console display)

To open, press in the lid.





► **Rear seat (5-seat models)**

To open, press the button and lift the lid.



► **Rear seat (4-seat models — seatback)**

To open, press in the lid.



► **Rear seat (4-seat model — armrest)**


To open, pull up the lever to release the lock and lift the lid.

## Cup Holders



### ► Front

To open, press down the lid on the side farthest to the driver.

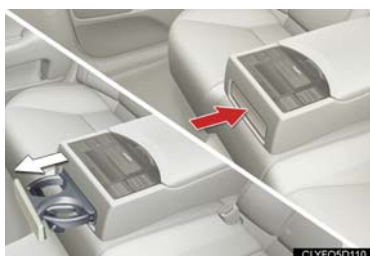

### ► Rear (5-seat models)

To open, press in and release.



### ► Rear (4-seat models)

To open, press in and release.


## Heated Steering Wheel



To heat the leather portion of the steering wheel, press the button.


Press again to cancel.

## Rear Sunshade/Rear Door Sunshades

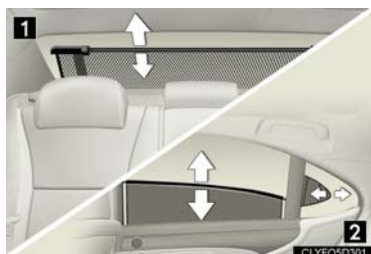


- 1 Rear sunshade
- 2 Rear door sunshades (if equipped)

### n Raising/Extending from the front seat

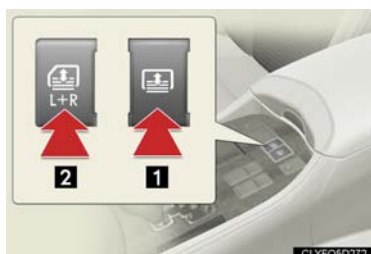

#### ► Without rear console display


- 1 Raises the rear sunshade  
Press the button again to lower it.
- 2 Extends the rear door sunshades  
Press the button again to retract them.

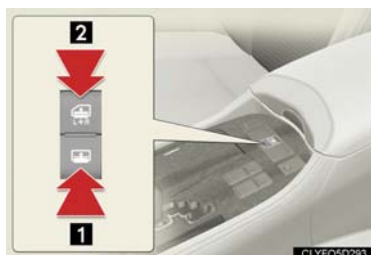

#### ► With rear console display

- 1 Raises the rear sunshade  
Press the button again to lower it.
- 2 Extends the rear door sunshades  
Press the button again to retract them.

## n Raising/Extending from the rear seat

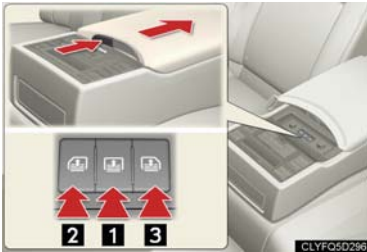


### ► 5-seat models

Slide the armrest lid.

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

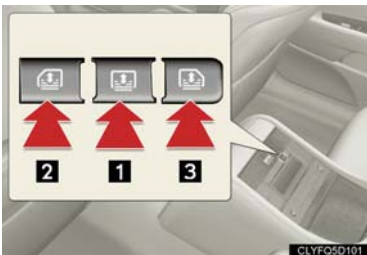

### ► 4-seat models

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.

## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

### n Programming HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the learn button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

## n Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## n Operating HomeLink®

---



Press the appropriate HomeLink® button.  
The indicator light should come on.

## Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM<sup>®</sup> satellite data services to provide safety and security as well as convenience features to subscribers.


Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

### **n** Safety Connect system components

---

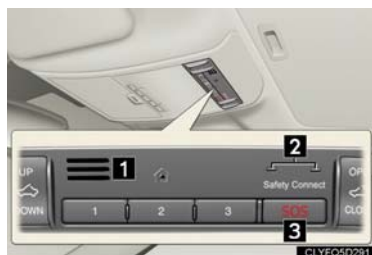

- 1** Microphone
- 2** LED light indicators
- 3** "SOS" button

## n Services

---

► **With an active Lexus Enform subscription, the following features are available:**

### 1 Safety Connect

- Automatic collision notification <sup>\*1</sup>

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

- Stolen vehicle location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- Emergency assistance button (SOS)

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- Enhanced roadside assistance

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).



## 1 **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

## 1 **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com](http://www.lexus.com) and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

## 1 **XM® Sports and Stocks**\*2

XM® Sports and Stocks is a service included with XM® satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

## 1 **XM NavWeather™**\*3

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

## 1 **XM® NavTraffic**\*3

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

- The following navigation-based Lexus Enform features are available without a subscription:

#### 1 Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

#### 1 Voice Command

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

\*1: U.S. Patent No. 7,508,298 B2

\*2: Available at no extra charge with an active XM<sup>®</sup> satellite radio subscription.

\*3: Available via separate XM<sup>®</sup> subscription(s).

## n Subscription

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or touch "Destination Assist" or push the "SOS" button in your vehicle for further subscription details. XM NavTraffic<sup>®</sup> and XM NavWeather<sup>™</sup> require separate XM<sup>®</sup> subscription(s). XM<sup>®</sup> Sports and Stocks is available with an XM<sup>®</sup> Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM<sup>®</sup> subscription(s) to continue receiving these services.